

ELECTRONICA SOFMEL

| | | | | |
|--|---|---|--|--|
| <p>8x2 Ficha Philips-Philco</p>  | <p>8x2M Ficha Philips-Philco</p>  | <p>SONY Ficha Sony 18 pines</p>  | <p>SONY1 Ficha Sony 18 pines</p>  | <p>SONY02 Ficha Sony Fusible lateral</p>  |
| <p>PIO01 Pioneer 5200 / / 7200 / 8200</p>  | <p>PIO02 Ficha Pioneer DEH 345 / 346 / 425</p>  | <p>PIO03 Ficha Pioneer 2000 / 2050 / 2150 / 3000</p>  | <p>PIO04 Ficha Pioneer 1700 / 1750 / 1800 / 3850</p>  | <p>PIO05 Ficha Pioneer DEH P 2300 / 3300 / 4300</p>  |
| <p>PIO06 Ficha Pioneer DEH P 740 / 780</p>  | <p>PIO10 Ficha Pioneer DEH P 1500 / 1550 / 1650 / 2550</p>  | <p>PIO12 Ficha Pioneer</p>  | <p>PIO15 Ficha Pioneer</p>  | <p>PIO16 Ficha Pioneer</p>  |
| <p>ADAPIO10 Ficha Pio10+8x2M</p>  | <p>ADAPIO16 Ficha Pio16+8x2M</p>  | <p>ADAPIO04 Ficha Pio10+8x2M</p>  | <p>ALPINE Ficha Alpine</p>  | |

ELECTRONICA SOFMEL

| | | | | |
|--|--|--|--|---|
| <p>AKITA Ficha Akita Durabrand-Otros</p>  | <p>BLAU Ficha Blaupunkt</p>  | <p>CLARION Ficha Clarion</p>  | <p>F16VPM1</p>  | <p>F16VPH3</p>  |
| <p>CA2004</p>  | <p>FIC</p>  | <p>CA2029 Ficha Pioneer In Dash</p>  | <p>CA1042 Ficha Panasonic Blanca</p>  | <p>CA1041 Ficha Panasonic Gris</p>  |
| <p>PAN01 Ficha Panasonic</p>  | <p>CA1007 Ficha Kenwood</p>  | <p>KDXL3 Ficha JVC</p>  | | |
| | | | | |