

# ELECTRONICA SOFMEL

<p><b>8x2</b> Ficha Philips-Philco</p> 	<p><b>8x2M</b> Ficha Philips-Philco</p> 	<p><b>SONY</b> Ficha Sony 18 pines</p> 	<p><b>SONY1</b> Ficha Sony 18 pines</p> 	<p><b>SONY02</b> Ficha Sony Fusible lateral</p> 
<p><b>PIO01</b> Pioneer 5200 / / 7200 / 8200</p> 	<p><b>PIO02</b> Ficha Pioneer DEH 345 / 346 / 425</p> 	<p><b>PIO03</b> Ficha Pioneer 2000 / 2050 / 2150 / 3000</p> 	<p><b>PIO04</b> Ficha Pioneer 1700 / 1750 / 1800 / 3850</p> 	<p><b>PIO05</b> Ficha Pioneer DEH P 2300 / 3300 / 4300</p> 
<p><b>PIO06</b> Ficha Pioneer DEH P 740 / 780</p> 	<p><b>PIO10</b> Ficha Pioneer DEH P 1500 / 1550 / 1650 / 2550</p> 	<p><b>PIO11</b> Ficha Pioneer DEH 3000 / 8200 / 9000</p> 	<p><b>PIO12</b> Ficha Pioneer</p> 	<p><b>PIO15</b> Ficha Pioneer</p> 
<p><b>PIO16</b> Ficha Pioneer</p> 	<p><b>ADAPIO10</b> Ficha Pio10+8x2M</p>  	<p><b>ADAPIO16</b> Ficha Pio16+8x2M</p>  	<p><b>ADAPIO04</b> Ficha Pio10+8x2M</p>  	<p><b>ALPINE</b> Ficha Alpine</p> 

# ELECTRONICA SOFMEL

<p><b>AKITA</b> Ficha Akita Durabrand-Otros</p> 	<p><b>BLAU</b> Ficha Blaupunkt</p> 	<p><b>CLARION</b> Ficha Clarion</p> 	<p><b>F16VPM1</b></p> 	<p><b>F16VPH3</b></p> 
<p><b>CA2004</b></p> 	<p><b>FIC</b></p> 	<p><b>CA2029</b> Ficha Pioneer In Dash</p> 	<p><b>CA1042</b> Ficha Panasonic Blanca</p> 	<p><b>CA1041</b> Ficha Panasonic Gris</p> 
<p><b>PAN01</b> Ficha Panasonic</p> 	<p><b>CA1007</b> Ficha Kenwood</p> 	<p><b>KDXL3</b> Ficha JVC</p> 	<p><b>CA1032</b> Ficha JVC Para armar</p> 	<p><b>CA3032</b> Ficha Universal Para armar</p>